



- 1- Camera Status LED
- 2- Infrared Facial Recognition Camera
- 3- Charging & Battery Indicator
- 4- Power Button
- 5- Power Mode Switch
- 6- LCD screen
- 7- Microphone
- 8- Caps Lock Status LED
- 9- Keyboard
- 10- Touchpad/Click pad
- \*Touchpad LED indicator/ Touchpad switch


\* Tap left corner twice to enable or disable (Green light) touchpad functionality

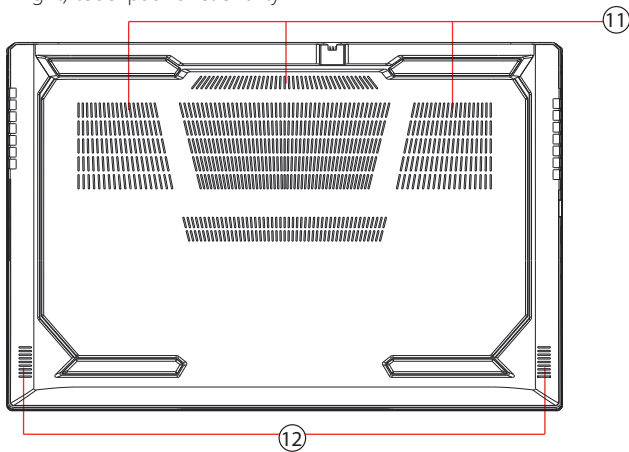

- 11- Vents
- 12- Speakers

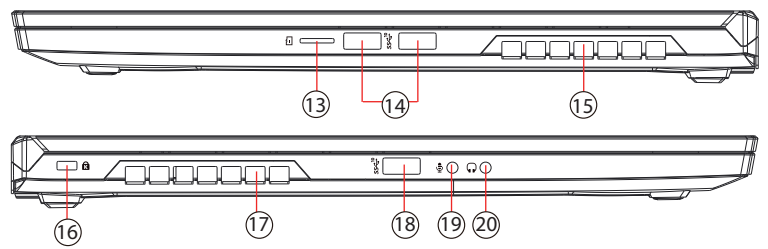

- 13- Card Reader
- 14- USB Ports
- 15- Vents
- 16- Kensington® Lock Port
- 17- Vents
- 18- USB Ports
- 19- Mic In Jack
- 20- Audio Out Jack

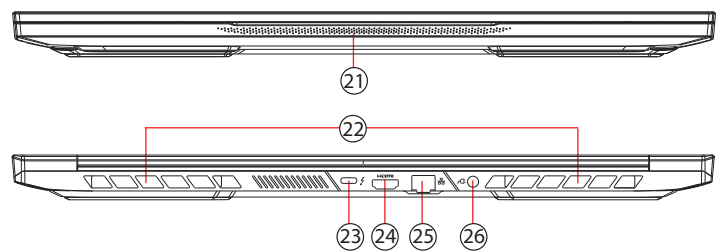

- 21- Light bar
- 22- Vents
- 23- Thunderbolt 3 (USB Type-C 3.1)
- 24- HDMI port
- 25- Network Jack
- 26- Power Connector

## Get Started

\*Please note: The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market adapter may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty.

