



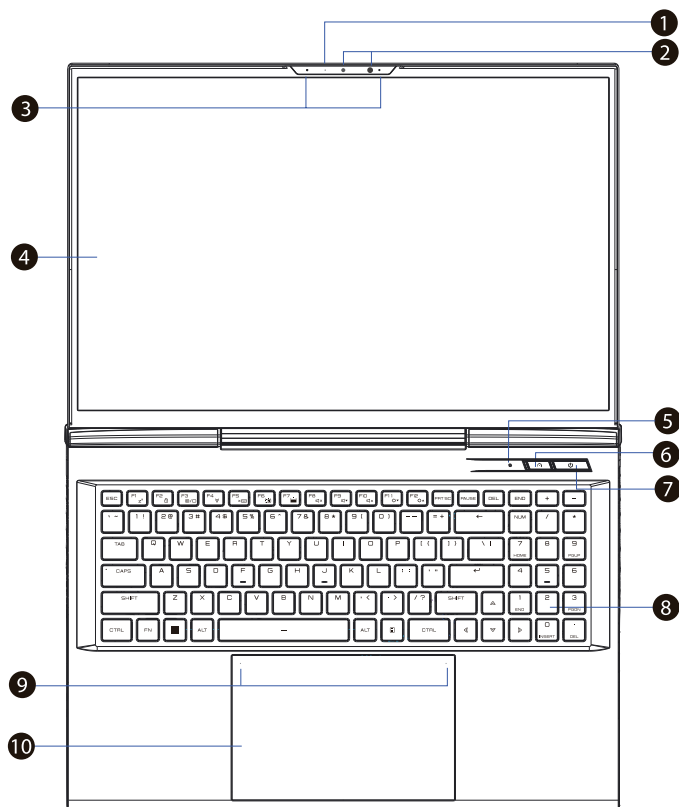


* Double tapping the left corner will turn the touchpad on or off.

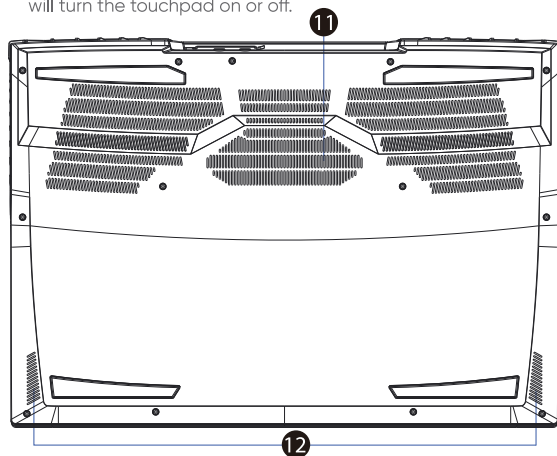


- 11 Vents
- 12 Speaker

- 01 Camera Status LED
- 02 Camera
- 03 Microphone
- 04 LCD screen
- 05 Caps Lock LED indicator
- 06 Mode Switch & LED indicator
- 07 Power Button
- 08 Keyboard
- 09 Touchpad LED indicator/ Touchpad switch
- 10 Touchpad

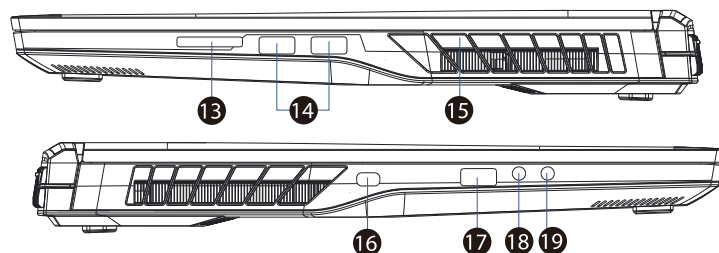

- 13 Card Reader
- 14 USB Port
- 15 Vents
- 16 Kensington® Lock Port
- 17 USB Ports
- 18 Mic In Jack
- 19 Audio Out Jack

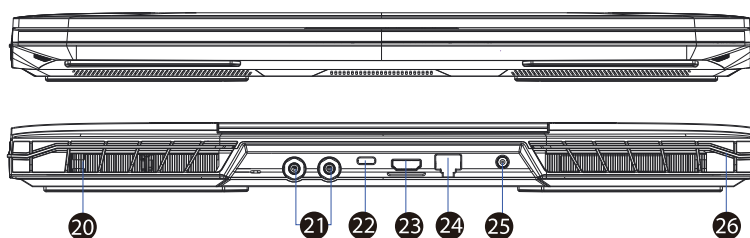

- 20 Vents
- 21 LPP G2 Liquid Port
- 22 USB Type C Port
- 23 HDMI Port
- 24 Network Jack
- 25 Power Connector
- 26 Light Bar

Powering On

Warning: The AC adapter included with your MECH-17 GP2 was specifically designed and approved for this model. Utilization of an after-market AC adapter may damage the laptop or other devices connected to it. If damage is determined to have been caused by an unauthorized power supply, it will not be protected under warranty.

